

AIX: How to access LPAR console from BLADE MM

Written by Wira Chinwong

Monday, 26 September 2016 23:25 -

IBM Blade Power

1. Connect to MM

2. console -T system:blade[6] (6 = BLADE Server ID)

3. mkvt -id x (x = lpar ID)